




WEBASTO HEATER

Your campervan is equipped with a Webasto Built in Heater

The heater controller is located on the wall behind the driver's seat.

- At least ½ Tank of Fuel required. Always run for at least 20 minutes. Always keep at least a ¼ Tank of Fuel when driving. If it drops below a ¼ Tank a heater reset may be needed.

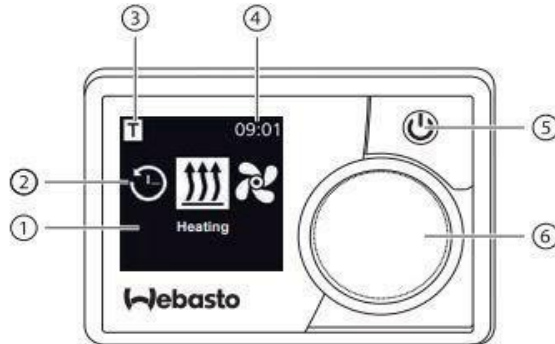

- | | | | |
|---|---|---|--|
| 1 | Menu name | 4 | Time |
| 2 | Menu symbol | 5 | Quick start button with status display |
| 3 | Activated time settings, ADR display*, altitude correction* | 6 | Control knob |

Turning On with Quick Start Button: (Please allow up to 10 minutes for the heater to start!)

- Press the Quick Start Button
- Turn the Control Knob to set the temperature. Once you have reached the desired temperature push in the Control Knob.
- If you see a timer counting down, then you will need to follow the instructions below.
- We recommend setting the heater to 61 degrees.


Turning on with the Control Knob: (Please allow up to 10 minutes for the heater to start!)

- Press the Control Knob once and wait for the unit to turn on. (you should hear a clicking sound start)
- At turn on the default will be the "Heating Menu"
- Press the Control Knob again to select heating
- Turn the Control Knob to set the temperature. Once you have reached the desired temperature push in the Control Knob. The heater has a small fuel pump which makes a faint clicking sound.
- We recommend setting the heater down to 61 degrees. (try starting heater 30 minutes before bed)

Turning Off: Press the Quick Start Button - Green light goes off (Please do not drive with heater running)

Got an Error or Issues?

- Ensure the exhaust under the van is clear and there are no objects blocking the heater inside. Try resetting the heater.
- To **Reset the Heater**, turn control knob to settings and press to select. Then use the knob to scroll to the end and select "Reset".

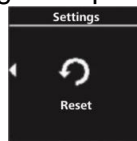

Still not working?
Call us at 1-888-222-5520

